

REPAIR MANUAL 2014



FC 350 EU

Art. no. 3403006en

INTRODUCTION

1

Read this repair manual carefully and thoroughly before beginning work.

The vehicle will only be able to meet the demands placed on it if the specified service work is performed regularly and properly.

This repair manual was written to correspond to the latest state of this model series. We reserve the right to make changes in the interest of technical advancement without updating this repair manual at the same time.

We shall not provide a description of general workshop methods. Likewise, safety rules that apply in a workshop are not specified here. It is assumed that the repair work will be performed by a fully trained mechanic.

All specifications are non-binding. Husqvarna Motorcycles GmbH specifically reserves the right to modify or delete technical specifications, prices, colors, forms, materials, services, designs, equipment, etc., without prior notice and without specifying reasons, to adapt these to local conditions, as well as to stop production of a particular model without prior notice. Husqvarna accepts no liability for delivery options, deviations from illustrations and descriptions, as well as misprints and other errors. The models portrayed partly contain special equipment that does not belong to the regular scope of supply.

© 2015 Husqvarna Motorcycles GmbH, Mattighofen Austria

All rights reserved

Reproduction, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.



REG.NO. 12 100 6061

ISO 9001(12 100 6061)

Husqvarna Motorcycles applies quality assurance processes that lead to the highest possible product quality as defined in the ISO 9001 international quality management standard.

Issued by: TÜV Management Service

Husqvarna Motorcycles GmbH

5230 Mattighofen, Austria



3403006en

08/2015

TABLE OF CONTENTS

2

1	MEANS OF REPRESENTATION.....	6	6.32	Changing the steering head bearing.....	40
1.1	Symbols used	6	6.33	Adjusting the steering head bearing play	41
1.2	Formats used.....	6	7	HANDLEBAR, CONTROLS.....	42
2	SAFETY ADVICE	7	7.1	Handlebar position.....	42
2.1	Repair Manual.....	7	7.2	Adjusting the handlebar position	42
2.2	Safety advice	7	7.3	Adjusting the basic position of the clutch lever	42
2.3	Degrees of risk and symbols	7	7.4	Checking the throttle cable routing	43
2.4	Work rules.....	7	7.5	Checking the play in the throttle cable	43
3	IMPORTANT NOTES	8	7.6	Adjusting the play in the throttle cable	44
3.1	Manufacturer and implied warranty	8	8	FRAME	45
3.2	Operating and auxiliary substances	8	8.1	Checking the frame.....	45
3.3	Spare parts, accessories	8	9	SHOCK ABSORBER, SWINGARM.....	46
3.4	Figures	8	9.1	Adjusting the high-speed compression damping of the shock absorber.....	46
4	SERIAL NUMBERS.....	9	9.2	Adjusting the low-speed compression damping of the shock absorber.....	46
4.1	Chassis number	9	9.3	Adjusting the rebound damping of the shock absorber.....	47
4.2	Type label.....	9	9.4	Measuring rear wheel sag unloaded.....	47
4.3	Engine number.....	9	9.5	Checking the static sag of the shock absorber.....	47
4.4	Fork part number	9	9.6	Checking the riding sag of the shock absorber.....	48
4.5	Shock absorber part number.....	9	9.7	Adjusting the spring preload of the shock absorber.....	48
5	MOTORCYCLE.....	10	9.8	Adjusting the riding sag	49
5.1	Raising the motorcycle with the lift stand.....	10	9.9	Removing the shock absorber	49
5.2	Removing the motorcycle from the lift stand.....	10	9.10	Installing the shock absorber.....	50
5.3	Starting	10	9.11	Checking the shock absorber linkage	51
5.4	Starting the motorcycle for a check.....	11	9.12	Servicing the shock absorber	53
6	FORK, TRIPLE CLAMP	12	9.13	Removing the spring.....	54
6.1	Adjusting the compression damping of the fork.....	12	9.14	Disassembling the damper	54
6.2	Adjusting the rebound damping of the fork	12	9.15	Disassembling the piston rod	55
6.3	Bleeding the fork legs	12	9.16	Disassembling the seal ring retainer	56
6.4	Cleaning the dust boots of the fork legs.....	13	9.17	Changing the pilot bushing.....	57
6.5	Loosening the fork protection.....	13	9.18	Checking the damper	58
6.6	Positioning the fork protection.....	14	9.19	Removing the heim joint	58
6.7	Removing the fork legs	14	9.20	Installing the heim joint	59
6.8	Installing the fork legs	14	9.21	Assembling the seal ring retainer.....	60
6.9	Removing the fork protector.....	15	9.22	Assembling the piston rod.....	61
6.10	Installing the fork protector.....	15	9.23	Assembling the damper	62
6.11	Conducting major fork service.....	15	9.24	Bleeding and filling the damper	64
6.12	Conducting minor fork service.....	16	9.25	Filling the damper with nitrogen	66
6.13	Disassembling the fork legs.....	16	9.26	Installing the spring.....	67
6.14	Disassembling the cartridge	19	9.27	Checking the swingarm	68
6.15	Disassembling the piston rod	21	9.28	Removing the swingarm	68
6.16	Disassembling the screw cap with the membrane holder.....	22	9.29	Installing the swingarm	69
6.17	Disassembling the screw sleeve.....	23	9.30	Changing the swingarm bearing.....	70
6.18	Checking the fork legs	24	10	EXHAUST	73
6.19	Checking the fork legs - during a minor fork service.....	25	10.1	Removing the manifold.....	73
6.20	Changing the pilot bushing.....	26	10.2	Installing the manifold.....	74
6.21	Assembling the screw sleeve	27	10.3	Removing the main silencer.....	75
6.22	Assembling the screw cap with the membrane holder.....	28	10.4	Installing the main silencer.....	75
6.23	Assembling the piston rod	29	10.5	Changing the glass fiber yarn filling of the main silencer	75
6.24	Assembling the cartridge	30	11	AIR FILTER	77
6.25	Assembling the fork legs	32	11.1	Removing the air filter box lid	77
6.26	Bleeding and filling the cartridge	35	11.2	Installing the air filter box lid	77
6.27	Filling the cartridge with nitrogen	36	11.3	Removing the air filter	77
6.28	Greasing the steering head bearing.....	37			
6.29	Removing the lower triple clamp	37			
6.30	Installing the lower triple clamp	38			
6.31	Checking the steering head bearing play	39			

TABLE OF CONTENTS

3

11.4	Installing the air filter	77	16.4	Adjusting the basic position of the hand brake lever	111
11.5	Cleaning the air filter and air filter box	78	16.5	Checking the brake fluid level of the front brake	111
11.6	Sealing the air filter box	78	16.6	Adding front brake fluid	112
12	FUEL TANK, SEAT, TRIM	79	16.7	Changing the front brake fluid	113
12.1	Opening the filler cap	79	16.8	Checking the rear brake linings	114
12.2	Closing the filler cap	79	16.9	Changing the rear brake linings	114
12.3	Removing the right side cover	79	16.10	Checking the free travel of foot brake lever.....	116
12.4	Installing the right side cover	80	16.11	Adjusting the basic position of the foot brake lever	116
12.5	Removing the seat	80	16.12	Checking the rear brake fluid level	116
12.6	Mounting the seat	80	16.13	Adding rear brake fluid	117
12.7	Removing the fuel tank	80	16.14	Changing the rear brake fluid	118
12.8	Installing the fuel tank	81	17	ENGINE	120
12.9	Checking the fuel pressure	82	17.1	Removing the engine	120
12.10	Changing the fuel pump	83	17.2	Installing the engine	125
12.11	Changing the fuel filter	85	17.3	Engine disassembly	130
12.12	Changing the fuel screen	87	17.3.1	Preparations	130
13	MASK, FENDER	89	17.3.2	Removing the clutch push rod	131
13.1	Removing the front fender	89	17.3.3	Removing the spacer	131
13.2	Installing the front fender	89	17.3.4	Draining the engine oil.....	131
13.3	Removing the start number plate	89	17.3.5	Removing the oil filter.....	132
13.4	Installing the start number plate	90	17.3.6	Removing the spark plug	132
14	WHEELS	91	17.3.7	Removing the valve cover	132
14.1	Checking the tire air pressure.....	91	17.3.8	Removing the starter motor	133
14.2	Checking the tire condition.....	91	17.3.9	Positioning the engine at ignition top dead center	133
14.3	Checking the brake discs	91	17.3.10	Removing the timing chain tensioner.....	134
14.4	Checking the spoke tension	92	17.3.11	Removing the camshaft	134
14.5	Front wheel	92	17.3.12	Removing the cylinder head.....	135
14.5.1	Removing the front wheel	92	17.3.13	Removing the piston	135
14.5.2	Installing the front wheel	93	17.3.14	Removing the rotor.....	136
14.5.3	Removing the brake disc of the front brake	94	17.3.15	Removing the starter drive	136
14.5.4	Installing the brake disc of the front brake.....	94	17.3.16	Removing the suction pump	136
14.5.5	Changing the front wheel bearing	94	17.3.17	Removing the water pump wheel.....	137
14.6	Rear wheel	95	17.3.18	Removing the clutch cover.....	138
14.6.1	Removing the rear wheel.....	95	17.3.19	Removing the clutch discs	138
14.6.2	Installing the rear wheel.....	96	17.3.20	Removing the outer clutch hub.....	138
14.6.3	Removing the brake disc of the rear brake	97	17.3.21	Removing the shift shaft.....	139
14.6.4	Installing the brake disc of the rear brake	97	17.3.22	Removing the shift drum locating unit	139
14.6.5	Checking the chain tension.....	98	17.3.23	Removing the locking lever	139
14.6.6	Adjusting the chain tension	98	17.3.24	Removing the force pump.....	139
14.6.7	Checking the chain, rear sprocket, engine sprocket, and chain guide.....	99	17.3.25	Removing the primary gear	140
14.6.8	Checking for chain dirt accumulation	100	17.3.26	Removing the timing chain.....	140
14.6.9	Cleaning the chain.....	100	17.3.27	Removing the spacer	141
14.6.10	Changing the drivetrain kit	101	17.3.28	Removing the left section of the engine case	141
14.6.11	Changing the rear wheel bearing	103	17.3.29	Removing the shift rails.....	142
15	WIRING HARNESS, BATTERY	105	17.3.30	Removing the shift drum	142
15.1	Changing the main fuse.....	105	17.3.31	Removing the shift forks	142
15.2	Removing the battery.....	105	17.3.32	Removing the transmission shafts	142
15.3	Installing the battery	106	17.3.33	Removing the crankshaft	143
15.4	Checking the charging voltage	106	17.4	Work on individual parts	143
15.5	Checking the quiescent current.....	107	17.4.1	Work on the right section of the engine case	143
15.6	Checking the capacitor.....	107	17.4.2	Work on the left section of the engine case	144
15.7	Checking the starter relay.....	108	17.4.3	Work on the clutch cover	145
16	BRAKE SYSTEM	109	17.4.4	Checking the oil pressure regulator valve	146
16.1	Checking the front brake linings	109			
16.2	Changing the front brake linings.....	109			
16.3	Checking the free travel of the hand brake lever	110			

TABLE OF CONTENTS

17.4.5	Checking the lubrication system	147	17.5.15	Installing the outer clutch hub	175
17.4.6	Removing the crankshaft bearing inner race	148	17.5.16	Installing the clutch discs	176
17.4.7	Changing the connecting rod, conrod bearing, and crank pin	148	17.5.17	Installing the clutch cover	176
17.4.8	Checking the crankshaft run-out at the bearing pin	149	17.5.18	Installing the water pump cover	177
17.4.9	Installing the crankshaft bearing inner race	149	17.5.19	Installing the starter drive	177
17.4.10	Measuring the crankshaft end play	150	17.5.20	Installing the rotor and ignition pulse generator	178
17.4.11	Removing the drive wheel of the balancer shaft.....	150	17.5.21	Installing the piston	178
17.4.12	Installing the drive wheel of the balancer shaft.....	151	17.5.22	Installing the cylinder head.....	180
17.4.13	Cylinder - Nikasil® coating.....	151	17.5.23	Installing the camshafts.....	181
17.4.14	Checking/measuring the cylinder.....	151	17.5.24	Checking the valve timing	181
17.4.15	Checking/measuring the piston	152	17.5.25	Adjusting the valve timing	181
17.4.16	Measuring the piston/cylinder mounting clearance.....	152	17.5.26	Installing the timing chain tensioner.....	183
17.4.17	Checking the piston ring end gap	153	17.5.27	Checking the valve clearance	183
17.4.18	Changing the camshaft bearing	153	17.5.28	Adjusting the valve clearance.....	184
17.4.19	Checking the camshafts.....	154	17.5.29	Installing the starter motor	184
17.4.20	Checking the pivot points of the camshafts.....	154	17.5.30	Installing the valve cover	185
17.4.21	Removing the valves	155	17.5.31	Installing the spark plug	186
17.4.22	Checking the valves	156	17.5.32	Installing the oil filter.....	186
17.4.23	Checking the valve springs	156	17.5.33	Installing the oil screen.....	187
17.4.24	Checking the valve spring seat	156	17.5.34	Installing the spacer	187
17.4.25	Checking the cam levers	157	17.5.35	Installing the clutch push rod	188
17.4.26	Checking the cylinder head.....	157	17.5.36	Removing the engine from the engine assembly stand	188
17.4.27	Installing the valves	157	18	CLUTCH	189
17.4.28	Checking the freewheel.....	158	18.1	Checking/correcting the fluid level of the hydraulic clutch.....	189
17.4.29	Removing the freewheel.....	159	18.2	Changing the hydraulic clutch fluid	189
17.4.30	Installing the freewheel.....	159	19	WATER PUMP, COOLING SYSTEM	191
17.4.31	Checking the electric starter drive	160	19.1	Cooling system	191
17.4.32	Checking the timing assembly	161	19.2	Checking the antifreeze and coolant level.....	191
17.4.33	Preparing the timing chain tensioner for installation	162	19.3	Checking the coolant level.....	192
17.4.34	Checking the clutch	162	19.4	Draining the coolant.....	192
17.4.35	Checking the shift mechanism.....	164	19.5	Refilling coolant	193
17.4.36	Preassembling the shift shaft.....	165	20	LUBRICATION SYSTEM	194
17.4.37	Disassembling the main shaft	165	20.1	Oil circuit	194
17.4.38	Disassembling the countershaft.....	166	20.2	Checking the engine oil level	194
17.4.39	Checking the transmission	166	20.3	Changing the engine oil and oil filter, cleaning the oil screen	195
17.4.40	Assembling the main shaft	167	20.4	Adding engine oil	196
17.4.41	Assembling the countershaft.....	168	20.5	Checking the engine oil pressure	197
17.5	Engine assembly	169	21	IGNITION SYSTEM.....	199
17.5.1	Installing the crankshaft	169	21.1	Ignition coil - checking the secondary winding.....	199
17.5.2	Installing the transmission shafts	170	21.2	Checking the spark plug connector.....	199
17.5.3	Installing the shift forks	170	21.3	Alternator - checking stator winding.....	199
17.5.4	Installing the shift drum	170	21.4	Removing the stator and ignition pulse generator.....	200
17.5.5	Installing the shift rails.....	171	21.5	Installing the stator and ignition pulse generator.....	200
17.5.6	Installing the left engine case.....	171	22	THROTTLE VALVE BODY	201
17.5.7	Installing the spacer	172	22.1	Adjusting the idle speed	201
17.5.8	Installing the timing chain.....	172	22.2	Executing the initialization run	201
17.5.9	Installing the primary gear	172	23	TECHNICAL DATA	202
17.5.10	Installing the force pump.....	173	23.1	Engine.....	202
17.5.11	Installing the suction pump	173	23.2	Engine tolerance, wear limits	202
17.5.12	Installing the locking lever	174	23.3	Engine tightening torques.....	203
17.5.13	Installing the shift drum locating unit	174	23.4	Capacities	204
17.5.14	Installing the shift shaft	175	23.4.1	Engine oil.....	204
			23.4.2	Coolant.....	204

TABLE OF CONTENTS

23.4.3	Fuel.....	204
23.5	Chassis	205
23.6	Electrical system.....	205
23.7	Tires	205
23.8	Fork.....	206
23.9	Shock absorber	206
23.10	Chassis tightening torques	207
24	CLEANING.....	208
24.1	Cleaning the motorcycle.....	208
25	STORAGE.....	209
25.1	Storage	209
25.2	Preparing for use after storage	209
26	SERVICE SCHEDULE.....	210
26.1	Service schedule.....	210
26.2	Service work (as additional order)	211
27	WIRING DIAGRAM	212
27.1	Page 1 of 3.....	212
27.2	Page 2 of 3.....	214
27.3	Page 3 of 3.....	216
28	SUBSTANCES.....	218
29	AUXILIARY SUBSTANCES.....	219
30	SPECIAL TOOLS	221
31	STANDARDS	235
	INDEX	236

1.1 Symbols used

The meaning of specific symbols is described below.



Indicates an expected reaction (e.g. of a work step or a function).



Indicates an unexpected reaction (e.g. of a work step or a function).



Indicates a page reference (more information is provided on the specified page).



Indicates information with more details or tips.



Indicates the result of a testing step.



Denotes a voltage measurement.



Denotes a current measurement.



Denotes a resistance measurement.

1.2 Formats used

The typographical formats used in this document are explained below.

Proprietary name	Identifies a proprietary name.
Name[®]	Identifies a protected name.
Brand[™]	Identifies a trademark.
<u>Underlined terms</u>	Refer to technical details of the vehicle or indicate technical terms, which are explained in the glossary.

2.1 Repair Manual

Read this Repair Manual carefully and thoroughly before beginning work. It contains useful information and tips that will help you repair and maintain your vehicle.

This manual assumes that the necessary special Husqvarna tools and Husqvarna workplace and workshop equipment are available.

2.2 Safety advice

A number of safety instructions need to be followed to operate the vehicle safely. Therefore, read this manual carefully. The safety instructions are highlighted in the text and are referred to at the relevant passages.



Info

The vehicle has various information and warning labels at prominent locations. Do not remove information/warning labels. If they are missing, you or others may not recognize dangers and may therefore be injured.

2.3 Degrees of risk and symbols



Danger

Indicates a danger that will immediately and invariably lead to fatal or serious permanent injury if the appropriate measures are not taken.



Warning

Indicates a danger that is likely to lead to fatal or serious injury if the appropriate measures are not taken.



Caution

Indicates a danger that may lead to minor injuries if the appropriate measures are not taken.

Note

Indicates a danger that will lead to considerable machine and material damage if the appropriate measures are not taken.



Warning

Indicates a danger that will lead to environmental damage if the appropriate measures are not taken.

2.4 Work rules

Special tools are necessary for certain tasks. The tools are not contained in the vehicle but can be ordered under the number in parentheses. E.g.: bearing puller (15112017000)

During assembly, non-reusable parts (e.g. self-locking screws and nuts, seals and seal rings, O-rings, pins, lock washers) must be replaced by new parts.

In some instances, a thread locker (e.g. **Loctite**®) is required. The manufacturer instructions for use must be followed.

After disassembly, clean the parts that are to be reused and check them for damage and wear. Change damaged or worn parts.

After you complete the repair or service work, check the operating safety of the vehicle.

3.1 Manufacturer and implied warranty

The work prescribed in the service schedule must be carried out by an authorized Husqvarna Motorcycles workshop only and confirmed both in the customer's Service & Warranty Booklet and in the **Husqvarna Motorcycles Dealer.net**; otherwise, all warranty claims will be void. No warranty claims can be considered for damage or secondary damage resulting from modifications and/or alterations to the vehicle.

Additional information on the manufacturer or implied warranty and the procedures involved can be found in the service & warranty booklet.

3.2 Operating and auxiliary substances



Warning

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to get into the ground water, the ground, or the sewage system.

Use the operating and auxiliary substances (such as fuel and lubricants) as specified in the manual.

3.3 Spare parts, accessories

Only use spare parts and accessories approved and/or recommended by Husqvarna. Husqvarna accepts no liability for other products and any resulting damage or loss.

The current **Husky Power** parts for your vehicle can be found on the Husqvarna website.


International Husqvarna Motorcycles website: www.husqvarna-motorcycles.com

3.4 Figures

The figures contained in the manual may depict special equipment.


In the interest of clarity, some components may be shown disassembled or may not be shown at all. It is not always necessary to disassemble the component to perform the activity in question. Please follow the instructions in the text.

4.1 Chassis number

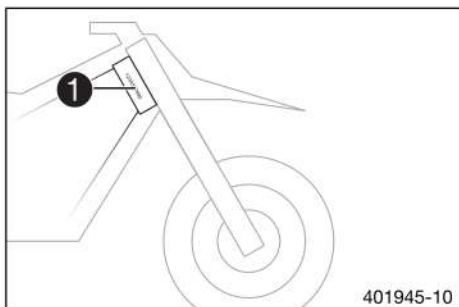


The chassis number ❶ is stamped on the right side of the steering head.

4.2 Type label

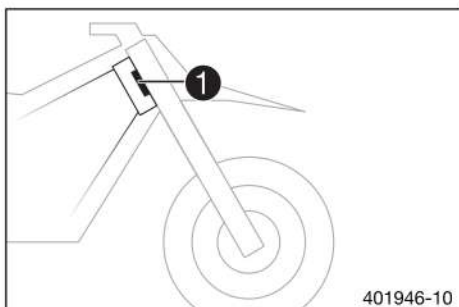


The type label ❶ is fixed to the front of the steering head.

4.3 Engine number

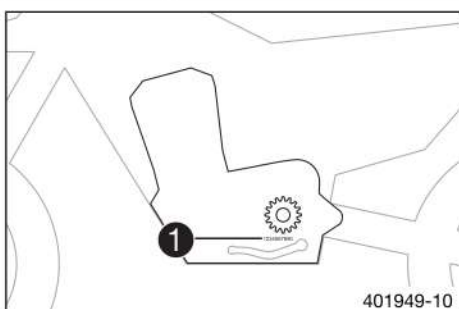


The engine number ❶ is stamped on the left side of the engine under the engine sprocket.

4.4 Fork part number

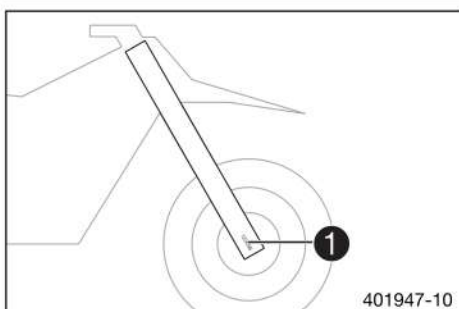

The fork part number ❶ is stamped on the inner side of the axle clamp.

4.5 Shock absorber part number

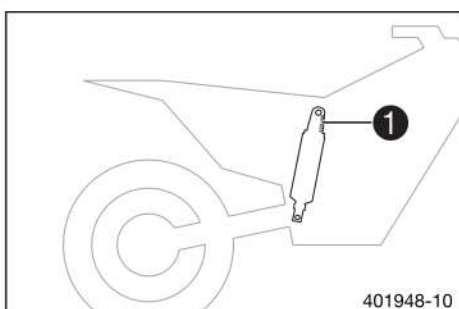

The shock absorber part number ❶ is stamped on the top of the shock absorber above the adjusting ring on the engine side.