

REPAIR MANUAL 2014



TE 250 EU

TE 250 AU

TE 250 US

TE 300 EU

TE 300 AU

TE 300 US

Art. no.3403005en

Read this repair manual carefully and thoroughly before beginning work.

The vehicle will only be able to meet the demands placed on it if the specified service work is performed regularly and properly.

This repair manual was written to correspond to the latest state of this model series. We reserve the right to make changes in the interest of technical advancement without updating this repair manual at the same time.

We shall not provide a description of general workshop methods. Likewise, safety rules that apply in a workshop are not specified here. It is assumed that the repair work will be performed by a fully trained mechanic.

All specifications are non-binding. Husqvarna Motorcycles GmbH specifically reserves the right to modify or delete technical specifications, prices, colors, forms, materials, services, designs, equipment, etc., without prior notice and without specifying reasons, to adapt these to local conditions, as well as to stop production of a particular model without prior notice. Husqvarna accepts no liability for delivery options, deviations from illustrations and descriptions, as well as misprints and other errors. The models portrayed partly contain special equipment that does not belong to the regular scope of supply.

© 2015Husqvarna Motorcycles GmbH,MattighofenAustria

All rights reserved

Reprinting, including excerpts, and duplication of any kind only with the written consent of the publisher.



ISO 9001(12 100 6061)

Husqvarna Motorcycles applies quality assurance processes that lead to the highest possible product quality as defined in the ISO 9001 international quality management standard.

Issued by:TÜV Management Service

REG.NO. 12 100 6061

Husqvarna Motorcycles GmbH
5230Mattighofen,Austria



TABLE OF CONTENTS

2

1	MEANS OF REPRESENTATION.....	6	7.2	Adjusting the handlebar position	35
1.1	Symbols used	6	7.3	Adjusting the basic position of the clutch lever	35
1.2	Formats used	6	7.4	Checking the throttle cable routing	36
2	SAFETY ADVICE	7	7.5	Checking the play in the throttle cable	36
2.1	Repair manual	7	7.6	Adjusting the play in the throttle cable	37
2.2	Safety advice	7	8	FRAME	38
2.3	Degrees of risk and symbols	7	8.1	Removing the engine guard.....	38
2.4	Work rules.....	7	8.2	Installing the engine guard.....	38
3	IMPORTANT NOTES	8	8.3	Checking the frame.....	38
3.1	Warranty.....	8	9	SHOCK ABSORBER, SWINGARM.....	39
3.2	Operating and auxiliary substances	8	9.1	Adjusting the high-speed compression damping of the shock absorber.....	39
3.3	Spare parts, accessories	8	9.2	Adjusting the low-speed compression damping of the shock absorber.....	39
3.4	Figures	8	9.3	Adjusting the rebound damping of the shock absorber.....	40
4	SERIAL NUMBERS.....	9	9.4	Measuring the sag of the unloaded rear wheel.....	40
4.1	Chassis number	9	9.5	Checking the static sag of the shock absorber.....	40
4.2	Type label(TE EU/AU)	9	9.6	Checking the riding sag of the shock absorber.....	41
4.3	Engine number.....	9	9.7	Adjusting the spring preload of the shock absorber.....	41
4.4	Fork article number.....	9	9.8	Adjusting the riding sag	42
4.5	Shock absorber article number	9	9.9	Removing the shock absorber.....	42
5	MOTORCYCLE.....	10	9.10	Installing the shock absorber.....	43
5.1	Raising the motorcycle with the lift stand.....	10	9.11	Checking the shock absorber linkage	43
5.2	Removing the motorcycle from the lift stand.....	10	9.12	Servicing the shock absorber	45
5.3	Starting	10	9.13	Removing the spring.....	46
5.4	Starting the motorcycle for checking.....	11	9.14	Disassembling the damper	46
6	FORK, TRIPLE CLAMP	12	9.15	Disassembling the piston rod	47
6.1	Adjusting the compression damping of the fork.....	12	9.16	Disassembling the seal ring retainer	48
6.2	Adjusting the rebound damping of the fork	12	9.17	Changing the pilot bushing.....	49
6.3	Bleeding the fork legs	12	9.18	Checking the damper	50
6.4	Cleaning the dust boots of the fork legs.....	13	9.19	Removing the heim joint	50
6.5	Loosening the fork protection.....	13	9.20	Installing the heim joint	51
6.6	Positioning the fork protection.....	14	9.21	Assembling the seal ring retainer.....	52
6.7	Removing the fork legs	14	9.22	Assembling the piston rod.....	53
6.8	Installing the fork legs	14	9.23	Assembling the damper	54
6.9	Removing the fork protector.....	15	9.24	Bleeding and filling the damper	56
6.10	Installing the fork protector.....	15	9.25	Filling the damper with nitrogen	58
6.11	Performing a fork service.....	16	9.26	Installing the spring.....	59
6.12	Disassembling the fork legs.....	16	9.27	Checking the swingarm	60
6.13	Removing the spring.....	18	9.28	Removing the swingarm	60
6.14	Disassembling the cartridge	19	9.29	Installing the swingarm	61
6.15	Disassembling the piston rod	20	9.30	Changing the swingarm bearing.....	62
6.16	Disassembling the hydrostop unit	21	10	EXHAUST	65
6.17	Disassembling the seal ring retainer.....	21	10.1	Removing the main silencer.....	65
6.18	Checking the fork legs.....	22	10.2	Installing the main silencer.....	65
6.19	Assembling the seal ring retainer.....	23	10.3	Changing the glass fiber yarn filling in the main silencer	65
6.20	Assembling the hydrostop unit.....	23	11	AIR FILTER	67
6.21	Assembling the piston rod	24	11.1	Removing the air filter box cover	67
6.22	Assembling the cartridge	25	11.2	Installing the air filter box cover	67
6.23	Assembling the fork legs	26	11.3	Removing the air filter.....	67
6.24	Greasing the steering head bearing.....	30	11.4	Installing the air filter	67
6.25	Removing the lower triple clamp	30	11.5	Cleaning the air filter and air filter box	68
6.26	Installing the lower triple clamp	31	11.6	Sealing the air filter box	68
6.27	Checking the play of the steering head bearing.....	32			
6.28	Changing the steering head bearing.....	33			
6.29	Adjusting the play of the steering head bearing.....	34			
7	HANDLEBAR, CONTROLS.....	35			
7.1	Handlebar position.....	35			

TABLE OF CONTENTS

3

12	FUEL TANK, SEAT, TRIM.....	69	16.5	Adjusting the basic position of the hand brake lever(TE USA)	95
12.1	Opening the filler cap.....	69	16.6	Checking the front brake fluid level	96
12.2	Closing the filler cap	69	16.7	Adding front brake fluid	96
12.3	Removing the right side cover.....	69	16.8	Changing the front brake fluid	97
12.4	Installing the right side cover	70	16.9	Checking the rear brake linings	98
12.5	Removing the seat.....	70	16.10	Changing the rear brake linings.....	99
12.6	Mounting the seat.....	70	16.11	Checking the free travel of the foot brake lever	100
12.7	Removing the fuel tank	70	16.12	Adjusting the basic position of the foot brake lever	101
12.8	Installing the fuel tank	71	16.13	Checking the rear brake fluid level	101
12.9	Fuel tap	72	16.14	Adding rear brake fluid	102
13	MASK, FENDER	73	16.15	Changing the rear brake fluid	103
13.1	Removing the front fender	73	17	LIGHTING SYSTEM, INSTRUMENTS	105
13.2	Installing the front fender	73	17.1	Setting the speedometer	105
13.3	Removing the headlight mask with the headlight	74	17.2	Setting the kilometers or miles	106
13.4	Installing the headlight mask with the headlight	74	17.3	Setting the clock	106
14	WHEELS.....	75	17.4	Setting the wheel circumference	106
14.1	Checking the tire air pressure.....	75	17.5	Setting the service display.....	107
14.2	Checking the tire condition.....	75	17.6	Checking the headlight setting	107
14.3	Checking the brake discs	76	17.7	Adjusting the headlight range	108
14.4	Checking the spoke tension	76	18	ENGINE	109
14.5	Front wheel	77	18.1	Removing the engine	109
14.5.1	Removing the front wheel	77	18.2	Installing the engine	113
14.5.2	Installing the front wheel	77	18.3	Engine disassembly	117
14.5.3	Removing the brake disc of the front brake	78	18.3.1	Clamping the engine into the engine work stand	117
14.5.4	Installing the brake disc of the front brake.....	78	18.3.2	Draining the gear oil	117
14.5.5	Changing the front wheel bearing	78	18.3.3	Removing the clutch push rod	118
14.6	Rear wheel	79	18.3.4	Removing the shift lever	118
14.6.1	Removing the rear wheel.....	79	18.3.5	Removing the engine sprocket	118
14.6.2	Installing the rear wheel.....	80	18.3.6	Removing the spacer	118
14.6.3	Removing the brake disc of the rear brake	81	18.3.7	Removing the starter motor	119
14.6.4	Installing the brake disc of the rear brake	81	18.3.8	Removing the kick starter	120
14.6.5	Checking the chain for dirt.....	81	18.3.9	Removing the cylinder head.....	120
14.6.6	Cleaning the chain.....	82	18.3.10	Removing the cylinder.....	121
14.6.7	Checking the chain tension.....	82	18.3.11	Removing the piston	122
14.6.8	Checking the chain, rear sprocket, engine sprocket, and chain guide.....	83	18.3.12	Removing the water pump cover	122
14.6.9	Adjusting the chain tension	84	18.3.13	Removing the clutch cover.....	123
14.6.10	Changing the drivetrain kit	85	18.3.14	Removing the clutch discs.....	123
14.6.11	Changing the rear wheel bearing	87	18.3.15	Removing the clutch basket.....	124
15	WIRING HARNESS, BATTERY.....	89	18.3.16	Removing the kick starter shaft.....	125
15.1	Plug-in connection, ignition timing map	89	18.3.17	Removing the intermediate kick starter gear	125
15.2	Changing the main fuse.....	89	18.3.18	Removing the shift shaft.....	125
15.3	Disconnecting the negative cable of the battery	89	18.3.19	Removing the shift drum locating unit	125
15.4	Connecting the negative cable of the battery.....	90	18.3.20	Removing the locking lever	126
15.5	Removing the battery.....	90	18.3.21	Removing the rotor.....	126
15.6	Installing the battery	91	18.3.22	Removing the reed valve housing	126
15.7	Checking the charging voltage	91	18.3.23	Removing the left engine case section	127
15.8	Checking the closed current.....	91	18.3.24	Removing the shift rails.....	127
15.9	Checking the starter relay.....	92	18.3.25	Removing the shift drum	127
16	BRAKE SYSTEM	93	18.3.26	Removing the shift forks	127
16.1	Checking the front brake linings	93	18.3.27	Removing the transmission shafts	128
16.2	Changing the front brake linings.....	93	18.3.28	Removing the crankshaft	128
16.3	Checking the free travel of the hand brake lever	95	18.4	Working on individual parts	128
16.4	Adjusting free travel of hand brake lever(TE EU/AU)	95	18.4.1	Work on the right section of the engine case	128

TABLE OF CONTENTS

4

18.4.2	Work on the left section of the engine case.....	129	18.5.24	Installing the kick starter	169
18.4.3	Removing the crankshaft bearing inner race	130	18.5.25	Installing the starter motor	169
18.4.4	Installing the crankshaft bearing inner race	130	18.5.26	Installing the spacer	171
18.4.5	Changing the connecting rod, conrod bearing, and crank pin	130	18.5.27	Installing the engine sprocket	171
18.4.6	Checking the crankshaft run-out at the bearing pin	132	18.5.28	Installing the shift lever.....	171
18.4.7	Checking/measuring the cylinder.....	132	18.5.29	Installing the clutch push rod	172
18.4.8	Removing the exhaust control	132	18.5.30	Installing the gear oil drain plug	172
18.4.9	Checking the exhaust control	134	18.5.31	Removing the engine from the work stand	172
18.4.10	Installing the exhaust control	135	19	CARBURETOR	173
18.4.11	Cylinder - Nikasil® coating.....	137	19.1	Choke.....	173
18.4.12	Checking/measuring the piston	137	19.2	Carburetor - adjusting the idle speed.....	173
18.4.13	Checking the piston ring end gap	138	19.3	Emptying the carburetor float chamber	174
18.4.14	Piston/cylinder - measuring the mounting clearance	138	19.4	Removing the carburetor	174
18.4.15	Disassembling the reed valve housing.....	139	19.5	Installing the carburetor	175
18.4.16	Checking the reed valve housing, reed valve and intake flange.....	140	19.6	Checking/adjusting the carburetor components.....	176
18.4.17	Assembling the reed valve housing.....	140	19.7	Disassembling the carburetor.....	177
18.4.18	Work on the clutch cover	142	19.8	Checking the choke slide.....	178
18.4.19	Checking the clutch	146	19.9	Checking the jet needle	178
18.4.20	Preassembling the shift shaft.....	147	19.10	Checking the throttle slide.....	178
18.4.21	Checking the shift mechanism.....	148	19.11	Checking the float needle valve.....	179
18.4.22	Disassembling the main shaft	149	19.12	Assembling the carburetor.....	179
18.4.23	Disassembling the countershaft.....	150	19.13	Checking/adjusting the float level.....	180
18.4.24	Checking the transmission.....	150	20	CLUTCH	181
18.4.25	Assembling the main shaft.....	151	20.1	Checking/rectifying the fluid level of the hydraulic clutch.....	181
18.4.26	Assembling the countershaft.....	152	20.2	Changing the hydraulic clutch fluid	181
18.4.27	Checking the kick starter	154	21	WATER PUMP, COOLING SYSTEM	182
18.4.28	Preassembling the kick starter shaft.....	154	21.1	Cooling system	182
18.4.29	Checking the electric starter drive	156	21.2	Checking the antifreeze and coolant level.....	182
18.5	Engine assembly.....	157	21.3	Checking the coolant level.....	182
18.5.1	Installing the crankshaft	157	21.4	Draining the coolant.....	183
18.5.2	Installing the transmission shafts	157	21.5	Refilling with coolant.....	183
18.5.3	Installing the shift forks	158	22	EXHAUST CONTROL	185
18.5.4	Installing the shift drum	158	22.1	Engine characteristic - setting the auxiliary spring	185
18.5.5	Installing the shift rails.....	158	23	LUBRICATION SYSTEM	186
18.5.6	Installing the left engine case section	158	23.1	Changing the gear oil.....	186
18.5.7	Installing the reed valve housing	159	23.2	Draining the gear oil.....	186
18.5.8	Installing the rotor.....	159	23.3	Filling in gear oil	187
18.5.9	Installing the locking lever	160	23.4	Checking the gear oil level.....	187
18.5.10	Installing the shift drum locating unit	160	23.5	Adding gear oil.....	187
18.5.11	Installing the shift shaft	160	24	IGNITION SYSTEM.....	189
18.5.12	Installing the intermediate kick starter gear	160	24.1	Checking the ignition system.....	189
18.5.13	Installing the kick starter shaft	160	24.2	Ignition coil - checking the primary winding	190
18.5.14	Installing the clutch basket.....	161	24.3	Ignition coil - checking the secondary winding.....	190
18.5.15	Installing the clutch discs.....	162	24.4	Checking the spark plug connector.....	191
18.5.16	Installing the clutch cover	163	24.5	Alternator - checking the charging coil of the ignition	191
18.5.17	Installing the water pump cover.....	164	24.6	Alternator - checking the light and battery winding.....	191
18.5.18	Installing the piston	164	24.7	Checking the crankshaft position sensor	192
18.5.19	Installing the cylinder.....	165	24.8	Removing the stator and crankshaft position sensor	193
18.5.20	Checking the X-distance	166	24.9	Installing the stator and crankshaft position sensor	193
18.5.21	Adjusting the X-distance	167	25	ELECTRIC STARTER.....	194
18.5.22	Adjusting the Z-distance	167	25.1	Checking the starter motor	194
18.5.23	Installing the cylinder head.....	169			

TABLE OF CONTENTS

26	TECHNICAL DATA	195
26.1	Engine	195
26.1.1	All TE 250	195
26.1.2	All TE 300	195
26.2	Engine tolerance, wear limits	196
26.2.1	All TE 250	196
26.2.2	All TE 300	196
26.3	Engine tightening torques.....	197
26.4	Capacities	198
26.4.1	Gear oil	198
26.4.2	Coolant.....	198
26.4.3	Fuel.....	198
26.5	Chassis	198
26.6	Electrical system.....	199
26.7	Tires	199
26.8	Fork.....	199
26.9	Shock absorber	200
26.10	Chassis tightening torques	200
26.11	Carburetor.....	201
26.11.1	TE 250 EU	201
26.11.2	TE 250 AU	201
26.11.3	TE 250 US	201
26.11.4	TE 300 EU	202
26.11.5	TE 300 AU	202
26.11.6	TE 300 US	202
26.12	Carburetor tuning.....	203
26.12.1	Carburetor tuning(All TE 250)	203
26.12.2	Carburetor tuning(All TE 300)	204
26.12.3	General carburetor tuning	205
27	CLEANING, CARE.....	206
27.1	Cleaning the motorcycle.....	206
27.2	Checks and maintenance steps for winter operation.....	207
28	STORAGE.....	208
28.1	Storage	208
28.2	Preparing for use after storage	208
29	SERVICE SCHEDULE.....	209
29.1	Service schedule.....	209
29.2	Service work (as additional order)	210
30	WIRING DIAGRAM	212
30.1	Page 1 of 5(TE EU).....	212
30.2	Page 2 of 5(TE EU).....	214
30.3	Page 3 of 5(TE EU).....	216
30.4	Page 4 of 5(TE EU).....	218
30.5	Page 5 of 5(TE EU).....	220
30.6	Page 1 of 5(TE AUS)	222
30.7	Page 2 of 5(TE AUS)	224
30.8	Page 3 of 5(TE AUS)	226
30.9	Page 4 of 5(TE AUS)	228
30.10	page 5 of 5(TE AUS)	230
30.11	Page 1 of 3(TE USA)	232
30.12	Page 2 of 3(TE USA)	234
30.13	Page 3 of 3(TE USA)	236
31	SUBSTANCES.....	238
32	AUXILIARY SUBSTANCES.....	240
33	SPECIAL TOOLS	242
34	STANDARDS	250
	INDEX	251

1.1 Symbols used

The meaning of specific symbols is described below.



Indicates an expected reaction (e.g. of a work step or a function).



Indicates an unexpected reaction (e.g. of a work step or a function).



Indicates a page reference (more information is provided on the specified page).



Indicates information with more details or tips.



Indicates the result of a testing step.



Denotes a voltage measurement.



Denotes a current measurement.



Denotes a resistance measurement.

1.2 Formats used

The typographical formats used in this document are explained below.

Proprietary name	Identifies a proprietary name.
Name[®]	Identifies a protected name.
Brand[™]	Identifies a trademark.
<u>Underlined terms</u>	Refer to technical details of the vehicle or indicate technical terms, which are explained in the glossary.

2.1 Repair manual

- It is imperative that you read this owner's manual carefully and completely before the start of work. It contains useful information and many tips on how to repair and maintain your vehicle.
- This manual assumes that the necessary special Husqvarna tools and Husqvarna workplace and workshop equipment are available.

2.2 Safety advice

A number of safety instructions need to be followed to operate the vehicle safely. Therefore, read this manual carefully. The safety instructions are highlighted in the text and are referred to at the relevant passages.



Info

The vehicle has various information and warning labels at prominent locations. Do not remove information/warning labels. If they are missing, you or others may not recognize dangers and may therefore be injured.

2.3 Degrees of risk and symbols



Danger

Indicates a danger that will immediately and invariably lead to fatal or serious permanent injury if the appropriate measures are not taken.



Warning

Indicates a danger that is likely to lead to fatal or serious injury if the appropriate measures are not taken.



Caution

Indicates a danger that may lead to minor injuries if the appropriate measures are not taken.

Note

Indicates a danger that will lead to considerable machine and material damage if the appropriate measures are not taken.



Warning

Indicates a danger that will lead to environmental damage if the appropriate measures are not taken.

2.4 Work rules

Special tools are needed for certain tasks. They are not included with the vehicle but can be ordered under the number in parentheses. E.g.: bearing puller (15112017000)

When the vehicle is assembled, non-reusable parts (e.g., self-locking screws and nuts, gaskets, seal rings, O-rings, splints, lock washers) must be replaced with new parts.

Where thread lockers are used on screw connections (e.g., **Loctite**®), follow the instructions for use from the manufacturer.

After disassembly, clean the parts that are to be reused and check them for damage and wear. Replace damaged or worn parts.

After you complete the repair or maintenance work, check the roadworthiness of the vehicle.

3.1 Warranty

The work prescribed in the service schedule must be carried out by an authorized Husqvarna Motorcycles workshop only and confirmed in the customer's Service & Warranty Booklet and in the **Husqvarna Motorcycles Dealer.net**; otherwise, all warranty claims will be void. No warranty claims can be considered for damage or secondary damage resulting from modifications and/or alterations to the vehicle.

3.2 Operating and auxiliary substances



Warning

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to get into the ground water, the ground, or the sewage system.

Use operating and auxiliary substances (such as fuel and lubricants) as specified in the Owner's Manual.

3.3 Spare parts, accessories

Only use spare parts and accessories approved and/or recommended by Husqvarna. Husqvarna accepts no liability for other products and any resulting damage or loss.


The current **Husky Power** parts for your vehicle can be found on the Husqvarna website.
International Husqvarna Motorcycles website: www.husqvarna-motorcycles.com

3.4 Figures

The figures contained in the manual may depict special equipment.


In the interest of clarity, some components may be shown disassembled or may not be shown at all. It is not always necessary to disassemble the component to perform the activity in question. Please follow the instructions in the text.

4.1 Chassis number

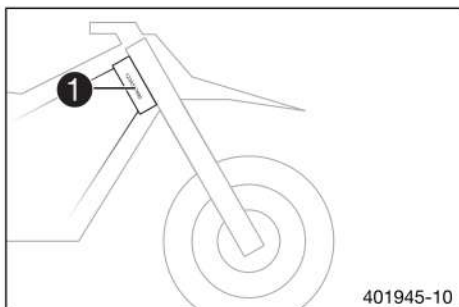


The chassis number ❶ is stamped on the right side of the steering head.

4.2 Type label(TE EU/AU)

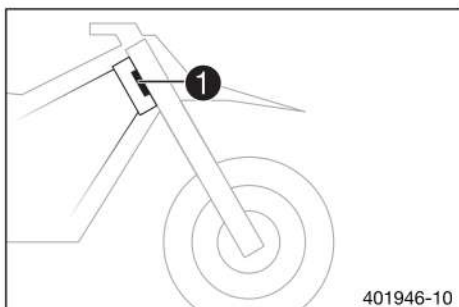


The type label ❶ is fixed to the front of the steering head.

4.3 Engine number

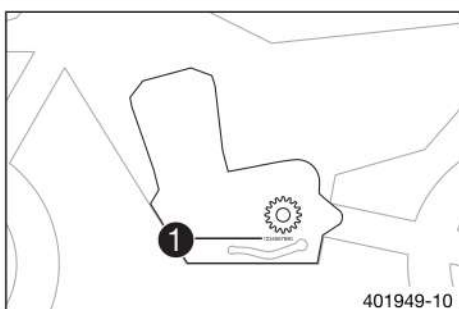


The engine number ❶ is stamped on the left side of the engine under the engine sprocket.

4.4 Fork article number

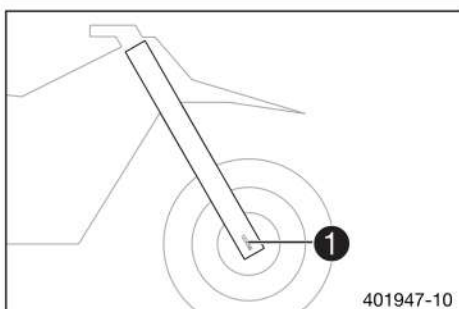

Fork article number ❶ is stamped on the inside of the axle clamp.

4.5 Shock absorber article number

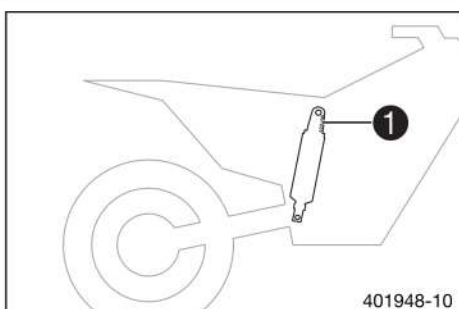

Shock absorber article number ❶ is stamped on the top of the shock absorber above the adjusting ring.