

REPAIR MANUAL 2014



1	MEANS OF REPRESENTATION	6	6.2.6	Positioning the fork protector	35
1.1	Symbols used	6	6.2.7	Removing the fork legs	35
1.2	Formats used	6	6.2.8	Installing the fork legs	36
2	SAFETY ADVICE	7	6.2.9	Removing the fork protector	36
2.1	Repair Manual	7	6.2.10	Installing the fork protector	37
2.2	Safety advice	7	6.2.11	Performing a fork service	37
2.3	Degrees of risk and symbols	7	6.2.12	Disassembling the fork legs	37
2.4	Work rules	7	6.2.13	Removing the spring	39
3	IMPORTANT NOTES	8	6.2.14	Disassembling the cartridge	40
3.1	Guarantee, warranty	8	6.2.15	Disassembling the piston rod	41
3.2	Operating and auxiliary substances	8	6.2.16	Disassembling the hydrostop unit	42
3.3	Spare parts, accessories	8	6.2.17	Disassembling the seal ring retainer	43
3.4	Figures	8	6.2.18	Checking the fork legs	43
4	SERIAL NUMBERS	9	6.2.19	Assembling the seal ring retainer	44
4.1	Chassis number	9	6.2.20	Assembling the hydrostop unit	45
4.2	Type label	9	6.2.21	Assembling the piston rod	45
4.3	Key number (all EXC models)	9	6.2.22	Assembling the cartridge	47
4.4	Engine number	10	6.2.23	Assembling the fork legs	48
4.5	Fork part number	10	6.2.24	Greasing the steering head bearing	51
4.6	Shock absorber part number	10	6.2.25	Removing the lower triple clamp	52
5	MOTORCYCLE	11	6.2.26	Installing the lower triple clamp	52
5.1	Raising the motorcycle with the lift stand	11	6.2.27	Checking the steering head bearing play	54
5.2	Removing the motorcycle from the lift stand	11	6.2.28	Adjusting the play of the steering head bearing	54
5.3	Starting	11	7	HANDLEBAR, CONTROLS	56
5.4	Starting the motorcycle for a check	12	7.1	Handlebar position	56
6	FORK, TRIPLE CLAMP	13	7.2	Adjusting handlebar position	56
6.1	EXC EU/AUS/USA, XC-W	13	7.3	Adjusting the basic position of the clutch lever	56
6.1.1	Adjusting the compression damping of the fork	13	7.4	Checking the throttle cable routing	57
6.1.2	Adjusting the rebound damping of the fork	13	7.5	Checking the play in the throttle cable	57
6.1.3	Adjusting the spring preload of the fork	13	7.6	Adjusting the play in the throttle cable	58
6.1.4	Bleeding fork legs	14	8	FRAME	59
6.1.5	Cleaning the dust boots of the fork legs	14	8.1	Removing the engine guard (EXC SIX DAYS, EXC AUS)	59
6.1.6	Loosening the fork protector	14	8.2	Installing the engine guard (EXC SIX DAYS, EXC AUS)	59
6.1.7	Positioning the fork protector	15	9	SHOCK ABSORBER, SWINGARM	60
6.1.8	Removing the fork legs	15	9.1	Adjusting the high-speed compression damping of the shock absorber	60
6.1.9	Installing the fork legs	15	9.2	Adjusting the low-speed compression damping of the shock absorber	60
6.1.10	Removing the fork protector	16	9.3	Adjusting the rebound damping of the shock absorber	61
6.1.11	Installing the fork protector	17	9.4	Measuring rear wheel sag unloaded	61
6.1.12	Performing a fork service	17	9.5	Checking the static sag of the shock absorber	61
6.1.13	Disassembling the fork legs	17	9.6	Checking the riding sag of the shock absorber	62
6.1.14	Cartridge disassembly	20	9.7	Adjusting the spring preload of the shock absorber	62
6.1.15	Disassembling the compression damping fitting	22	9.8	Adjusting the riding sag	63
6.1.16	Checking the fork legs	22	9.9	Removing the shock absorber	63
6.1.17	Assembling the compression damping fitting	24	9.10	Installing the shock absorber	63
6.1.18	Assembling the cartridge	24	9.11	Servicing the shock absorber	64
6.1.19	Assembling the fork legs	26	9.12	Removing the spring	64
6.1.20	Greasing the steering head bearing	30	9.13	Disassembling the damper	65
6.1.21	Removing the lower triple clamp	30	9.14	Disassembling the piston rod	66
6.1.22	Installing the lower triple clamp	31	9.15	Disassembling the seal ring retainer	67
6.1.23	Checking the steering head bearing play	33	9.16	Replacing the pilot bushing	68
6.1.24	Adjusting the play of the steering head bearing	33	9.17	Checking the damper	69
6.2	EXC SIX DAYS	34	9.18	Disassembling the rebound adjuster	69
6.2.1	Adjusting the compression damping of the fork	34	9.19	Removing the heim joint	70
6.2.2	Adjusting the rebound damping of the fork	34	9.20	Installing the heim joint	71
6.2.3	Bleeding fork legs	34			
6.2.4	Cleaning the dust boots of the fork legs	34			
6.2.5	Loosening the fork protector	35			

9.21	Assembling the rebound adjuster.....	72	15.2	Changing the fuses of individual power consumers.....	111
9.22	Assembling the seal ring retainer.....	72	15.3	Removing the battery	112
9.23	Assembling the piston rod.....	73	15.4	Installing the battery	112
9.24	Assembling the damper	74	15.5	Checking the charging voltage.....	113
9.25	Bleeding and filling the damper	77	15.6	Checking the quiescent current	113
9.26	Filling the damper with nitrogen.....	79	16	BRAKE SYSTEM	114
9.27	Installing the spring	80	16.1	Checking the front brake linings	114
9.28	Changing the heim joint.....	81	16.2	Changing the front brake linings.....	114
10	EXHAUST	83	16.3	Checking free travel of hand brake lever	116
10.1	Removing the manifold.....	83	16.4	Adjusting the basic position of the hand brake lever (XC-W)	116
10.2	Installing the manifold	83	16.5	Adjusting free travel of hand brake lever (all EXC models).....	116
10.3	Removing main silencer.....	84	16.6	Checking the brake fluid level of the front brake	117
10.4	Installing the main silencer.....	84	16.7	Adding front brake fluid.....	117
10.5	Changing the glass fiber yarn filling of the main silencer.....	84	16.8	Changing the front brake fluid.....	118
11	AIR FILTER	86	16.9	Checking the rear brake linings	119
11.1	Removing the air filter box lid	86	16.10	Changing the rear brake linings	119
11.2	Installing the air filter box lid	86	16.11	Checking the free travel of foot brake lever	121
11.3	Sealing the air filter box	86	16.12	Adjusting the basic position of the foot brake lever	121
11.4	Removing the air filter.....	86	16.13	Checking the rear brake fluid level.....	122
11.5	Installing the air filter.....	87	16.14	Adding rear brake fluid	122
11.6	Cleaning the air filter and air filter box.....	87	16.15	Changing the rear brake fluid	123
12	FUEL TANK, SEAT, TRIM	89	17	LIGHTING SYSTEM, INSTRUMENTS	125
12.1	Opening filler cap	89	17.1	Checking the headlight setting	125
12.2	Closing filler cap.....	89	17.2	Adjusting the headlight range.....	125
12.3	Removing the seat	89	17.3	EXC EU/AUS/USA, XC-W	125
12.4	Mounting the seat	90	17.3.1	Speedometer overview.....	125
12.5	Removing the fuel tank.....	90	17.3.2	Activation and test.....	126
12.6	Installing the fuel tank	91	17.3.3	Setting kilometers or miles	126
12.7	Changing the fuel screen	92	17.3.4	Adjusting the speedometer functions	126
12.8	Changing the fuel filter.....	93	17.3.5	Setting the clock	127
12.9	Changing the fuel pump	95	17.3.6	Setting the wheel circumference	127
12.10	Checking the fuel pressure.....	96	17.3.7	Querying lap time	128
13	MASK, FENDER.....	98	17.4	EXC SIX DAYS	128
13.1	Removing the front fender	98	17.4.1	Speedometer overview.....	128
13.2	Installing the front fender	98	17.4.2	Activation and test.....	129
13.3	Removing headlight mask with headlight.....	98	17.4.3	Setting kilometers or miles	129
13.4	Refitting the headlight mask with the headlight.....	99	17.4.4	Setting the speedometer functions	129
14	WHEELS	100	17.4.5	Setting the clock	130
14.1	Checking the tire air pressure.....	100	17.4.6	Activating the additional functions	130
14.2	Checking the tire condition	100	17.4.7	Setting the wheel circumference	131
14.3	Checking the brake discs	101	17.4.8	Viewing the lap time	131
14.4	Checking spoke tension	101	18	ENGINE	133
14.5	Front wheel	102	18.1	Removing the engine.....	133
14.5.1	Removing the front wheel	102	18.2	Installing the engine.....	137
14.5.2	Installing the front wheel	102	18.3	Engine disassembly.....	142
14.5.3	Removing the front brake disc.....	103	18.3.1	Preparations.....	142
14.5.4	Installing the front brake disc	103	18.3.2	Draining the engine oil	142
14.6	Rear wheel	103	18.3.3	Removing the clutch push rod.....	143
14.6.1	Removing the rear wheel	103	18.3.4	Removing the oil filter	143
14.6.2	Installing the rear wheel	104	18.3.5	Removing the starter motor.....	144
14.6.3	Removing the rear brake disc	105	18.3.6	Removing the kickstarter	144
14.6.4	Installing the rear brake disc.....	105	18.3.7	Removing the spark plug	144
14.6.5	Checking the chain tension.....	106	18.3.8	Removing the valve cover.....	144
14.6.6	Adjusting the chain tension	106	18.3.9	Removing the alternator cover	145
14.6.7	Checking the chain, rear sprocket, engine sprocket and chain guide.....	107	18.3.10	Positioning the engine at ignition top dead center.....	145
14.6.8	Checking for chain dirt accumulation.....	109	18.3.11	Removing the timing chain tensioner	146
14.6.9	Cleaning the chain	109			
15	WIRING HARNESS, BATTERY.....	110			
15.1	Changing the main fuse.....	110			

18.3.12	Removing the camshaft	146	18.4.21	Assembling the autodecompressor	167
18.3.13	Removing the cylinder head	146	18.4.22	Checking camshaft	168
18.3.14	Removing the piston	147	18.4.23	Checking the timing assembly	168
18.3.15	Removing the rotor	147	18.4.24	Removing the rocker arm	169
18.3.16	Removing the timing chain guide rail	147	18.4.25	Removing the valves	169
18.3.17	Removing the timing chain tensioning rail	148	18.4.26	Changing camshaft bearing	170
18.3.18	Removing the timing chain securing guide	148	18.4.27	Checking the valves	170
18.3.19	Removing the timing chain	148	18.4.28	Checking valve springs	171
18.3.20	Removing the ignition pulse generator	148	18.4.29	Checking valve spring seat	171
18.3.21	Removing the suction pump	148	18.4.30	Checking the cylinder head	171
18.3.22	Removing the water pump cover	149	18.4.31	Checking the rocker arm shafts	172
18.3.23	Removing the clutch cover	149	18.4.32	Installing the valves	172
18.3.24	Removing the clutch discs	150	18.4.33	Installing the rocker arm	173
18.3.25	Removing the primary gear nut	151	18.4.34	Checking the clutch	173
18.3.26	Removing the outer clutch hub	151	18.4.35	Checking the shift mechanism	175
18.3.27	Removing the torque limiter	152	18.4.36	Preassembling the shift shaft	176
18.3.28	Removing the starter idler gear	152	18.4.37	Disassembling the main shaft	176
18.3.29	Removing the kickstarter idler gear	152	18.4.38	Assembling the main shaft	177
18.3.30	Removing the kickstarter idler gear	152	18.4.39	Disassembling the countershaft	178
18.3.31	Removing the shift shaft	152	18.4.40	Assembling the countershaft	178
18.3.32	Removing the shift drum locating unit	153	18.4.41	Checking the transmission	179
18.3.33	Removing the locking lever	153	18.4.42	Premounting the kickstarter shaft	181
18.3.34	Removing the oil pump gear wheels	153	18.4.43	Checking the starter drive	182
18.3.35	Removing the force pump	154	18.4.44	Removing the freewheel	182
18.3.36	Removing the primary gear	154	18.4.45	Checking the freewheel	183
18.3.37	Removing the freewheel gear	154	18.4.46	Installing the freewheel	183
18.3.38	Removing the left engine case section	154	18.5	Engine assembly	184
18.3.39	Removing the shift rails	155	18.5.1	Installing the crankshaft	184
18.3.40	Removing the shift drum	155	18.5.2	Installing the transmission shafts	184
18.3.41	Removing the shift forks	156	18.5.3	Installing the shift forks	184
18.3.42	Removing the transmission shafts	156	18.5.4	Installing the shift drum	185
18.3.43	Removing the crankshaft	156	18.5.5	Installing the shift rails	185
18.4	Work on individual parts	157	18.5.6	Installing the left engine case	185
18.4.1	Work on the right section of the engine case	157	18.5.7	Installing the freewheel gear	186
18.4.2	Work on the left section of the engine case	158	18.5.8	Installing the primary gear	186
18.4.3	Removing the oil pressure regulator valve	159	18.5.9	Installing the force pump	186
18.4.4	Checking spring length of oil pressure regulator valve	159	18.5.10	Installing the oil pump gear wheels	187
18.4.5	Installing the oil pressure regulator valve	160	18.5.11	Installing the locking lever	187
18.4.6	Removing the crankshaft seal ring in the clutch cover	160	18.5.12	Installing the shift drum locating unit	187
18.4.7	Installing the crankshaft seal ring in the clutch cover	160	18.5.13	Installing the shift shaft	188
18.4.8	Removing the water pump	160	18.5.14	Installing the kickstarter idler gear	188
18.4.9	Installing the water pump	161	18.5.15	Installing the kickstarter shaft	188
18.4.10	Removing the timing chain sprocket	162	18.5.16	Installing the starter idler gear	188
18.4.11	Installing the timing chain sprocket	162	18.5.17	Installing the torque limiter	189
18.4.12	Changing the connecting rod, conrod bearing, and crank pin	162	18.5.18	Installing the outer clutch hub	189
18.4.13	Checking crankshaft run-out at bearing pin	164	18.5.19	Installing the primary gear nut	190
18.4.14	Cylinder - Nikasil® coating	164	18.5.20	Installing the clutch discs	190
18.4.15	Checking/measuring the cylinder	164	18.5.21	Installing the clutch cover	191
18.4.16	Checking/measuring the piston	165	18.5.22	Installing the water pump cover	192
18.4.17	Checking the piston ring end gap	165	18.5.23	Installing the suction pump	192
18.4.18	Measuring the piston/cylinder mounting clearance	166	18.5.24	Installing the ignition pulse generator	193
18.4.19	Checking the oil pumps	166	18.5.25	Installing the timing chain	193
18.4.20	Disassembling the autodecompressor	166	18.5.26	Installing the timing chain securing guide ...	193
			18.5.27	Installing the timing chain tensioning rail	194
			18.5.28	Installing the timing chain guide rail	194
			18.5.29	Installing the rotor	194
			18.5.30	Installing the piston	194
			18.5.31	Installing the cylinder head	196
			18.5.32	Installing the camshaft	197
			18.5.33	Installing the timing chain tensioner	197
			18.5.34	Checking the valve clearance	198

18.5.35	Adjusting the valve clearance	198	26.2	Checks and maintenance steps for winter operation.....	225
18.5.36	Installing the alternator cover.....	198	27	STORAGE.....	226
18.5.37	Installing the valve cover	199	27.1	Storage	226
18.5.38	Installing the spark plug	199	27.2	Preparing for use after storage.....	226
18.5.39	Installing the kickstarter	199	28	SERVICE SCHEDULE	227
18.5.40	Installing the starter motor.....	199	28.1	Service schedule.....	227
18.5.41	Installing the oil filter.....	200	28.2	Service work (as additional order)	228
18.5.42	Installing the clutch push rod	200	29	WIRING DIAGRAM	230
18.5.43	Installing the oil screen	200	29.1	Page 1 of 8 (EXC EU).....	230
18.5.44	Removing the engine from the engine assembly stand.....	201	29.2	Page 2 of 8 (EXC EU).....	232
19	CLUTCH.....	202	29.3	Page 3 of 8 (EXC EU).....	234
19.1	Checking/correcting the fluid level of the hydraulic clutch.....	202	29.4	Page 4 of 8 (EXC EU).....	236
19.2	Changing the hydraulic clutch fluid	202	29.5	Page 5 of 8 (EXC EU).....	238
20	WATER PUMP, COOLING SYSTEM	203	29.6	Page 6 of 8 (EXC EU).....	240
20.1	Cooling system	203	29.7	Page 7 of 8 (EXC EU).....	242
20.2	Checking the antifreeze and coolant level	203	29.8	Page 8 of 8 (EXC EU).....	244
20.3	Checking the coolant level	204	29.9	Page 1 of 8 (EXC AUS).....	246
20.4	Draining the coolant.....	204	29.10	Page 2 of 8 (EXC AUS).....	248
20.5	Refilling coolant	205	29.11	Page 3 of 8 (EXC AUS).....	250
21	LUBRICATION SYSTEM.....	206	29.12	Page 4 of 8 (EXC AUS).....	252
21.1	Oil circuit.....	206	29.13	Page 5 of 8 (EXC AUS).....	254
21.2	Checking the engine oil level.....	206	29.14	Page 6 of 8 (EXC AUS).....	256
21.3	Changing the engine oil and oil filter, cleaning the oil screens	206	29.15	Page 7 of 8 (EXC AUS).....	258
21.4	Adding engine oil	209	29.16	Page 8 of 8 (EXC AUS).....	260
21.5	Checking the engine oil pressure	209	29.17	Page 1 of 8 (EXC USA).....	262
22	IGNITION SYSTEM.....	211	29.18	Page 2 of 8 (EXC USA).....	264
22.1	Ignition coil - checking the secondary winding.....	211	29.19	Page 3 of 8 (EXC USA).....	266
22.2	Checking the spark plug connector	211	29.20	Page 4 of 8 (EXC USA).....	268
22.3	Alternator - checking the stator winding	211	29.21	Page 5 of 8 (EXC USA).....	270
22.4	Removing the stator	212	29.22	Page 6 of 8 (EXC USA).....	272
22.5	Installing the stator	212	29.23	Page 7 of 8 (EXC USA).....	274
23	ELECTRIC STARTER	213	29.24	Page 8 of 8 (EXC USA).....	276
23.1	Checking the starter motor	213	29.25	Page 1 of 8 (EXC SIX DAYS)	278
24	THROTTLE VALVE BODY	214	29.26	Page 2 of 8 (EXC SIX DAYS)	280
24.1	Adjusting the idle speed	214	29.27	Page 3 of 8 (EXC SIX DAYS)	282
24.2	Throttle position sensor circuit A - checking the basic settings.....	214	29.28	Page 4 of 8 (EXC SIX DAYS)	284
24.3	Throttle position sensor - adjusting the basic settings.....	214	29.29	Page 5 of 8 (EXC SIX DAYS)	286
24.4	Executing the initialization run	215	29.30	Page 6 of 8 (EXC SIX DAYS)	288
25	TECHNICAL DATA.....	216	29.31	Page 7 of 8 (EXC SIX DAYS)	290
25.1	Engine	216	29.32	Page 8 of 8 (EXC SIX DAYS)	292
25.2	Engine tolerance, wear limits	216	29.33	Page 1 of 6 (XC-W)	294
25.3	Engine tightening torques	217	29.34	Page 2 of 6 (XC-W)	296
25.4	Capacities	219	29.35	Page 3 of 6 (XC-W)	298
25.4.1	Engine oil	219	29.36	Page 4 of 6 (XC-W)	300
25.4.2	Coolant	219	29.37	Page 5 of 6 (XC-W)	302
25.4.3	Fuel	219	29.38	Page 6 of 6 (XC-W)	304
25.5	Chassis	219	30	SUBSTANCES	306
25.6	Electrical system.....	220	31	AUXILIARY SUBSTANCES	307
25.7	Tires	220	32	SPECIAL TOOLS	309
25.8	Fork.....	220	33	STANDARDS	323
25.8.1	EXC EU/AUS/USA, XC-W	220	34	LIST OF ABBREVIATIONS.....	324
25.8.2	EXC SIX DAYS	221	INDEX		325
25.9	Shock absorber	221			
25.10	Chassis tightening torques	222			
26	CLEANING, CARE	224			
26.1	Cleaning the motorcycle	224			

1.1 Symbols used

The meaning of specific symbols is described below.



Indicates an expected reaction (e.g. of a work step or a function).



Indicates an unexpected reaction (e.g. of a work step or a function).



Indicates a page reference (more information is provided on the specified page).



Indicates information with more details or tips.



Indicates the result of a testing step.



Denotes a voltage measurement.



Denotes a current measurement.



Denotes a resistance measurement.

1.2 Formats used

The typographical formats used in this document are explained below.

Proprietary name	Identifies a proprietary name.
Name®	Identifies a protected name.
Brand™	Identifies a trademark.
<u>Underlined terms</u>	Refer to technical details of the vehicle or indicate technical terms, which are explained in the glossary.

2.1 Repair Manual

Read this Repair Manual carefully and thoroughly before beginning work. It contains useful information and tips that will help you repair and maintain your vehicle.

This manual assumes that the necessary special KTM tools and KTM workplace and workshop equipment are available.

2.2 Safety advice

A number of safety instructions need to be followed to operate the vehicle safely. Therefore, read this manual carefully. The safety instructions are highlighted in the text and are referred to at the relevant passages.

 **Info**
The vehicle has various information and warning labels at prominent locations. Do not remove information/warning labels. If they are missing, you or others may not recognize dangers and may therefore be injured.

2.3 Degrees of risk and symbols

 **Danger**
Indicates a danger that will immediately and invariably lead to fatal or serious permanent injury if the appropriate measures are not taken.

 **Warning**
Indicates a danger that is likely to lead to fatal or serious injury if the appropriate measures are not taken.

 **Caution**
Indicates a danger that may lead to minor injuries if the appropriate measures are not taken.

Note
Indicates a danger that will lead to considerable machine and material damage if the appropriate measures are not taken.

 **Warning**
Indicates a danger that will lead to environmental damage if the appropriate measures are not taken.

2.4 Work rules

Special tools are necessary for certain tasks. The tools are not contained in the vehicle but can be ordered under the number in parentheses. E.g.: bearing puller (15112017000)

During assembly, non-reusable parts (e.g. self-locking screws and nuts, seals and seal rings, O-rings, pins, lock washers) must be replaced by new parts.

In some instances, a thread locker (e.g. **Loctite®**) is required. The manufacturer instructions for use must be followed.

After disassembly, clean the parts that are to be reused and check them for damage and wear. Change damaged or worn parts.

After you complete the repair or service work, check the operating safety of the vehicle.

3.1 Guarantee, warranty

The work prescribed in the service schedule must be carried out by an authorized KTM workshop only and confirmed in the customer's Service & Warranty Booklet and in the **KTM Dealer.net**; otherwise, all warranty claims will be void. No warranty claims can be considered for damage resulting from manipulations and/or alterations to the vehicle.

Additional information on the guarantee or warranty and the procedures involved can be found in the Service & Warranty Booklet.

3.2 Operating and auxiliary substances



Warning

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to get into the ground water, the ground, or the sewage system.

Use the operating and auxiliary substances (such as fuel and lubricants) as specified in the manual.

3.3 Spare parts, accessories

Only use spare parts and accessories approved and/or recommended by KTM. KTM accepts no liability for other products and any resulting damage or loss.

The current **KTM PowerParts** for your vehicle can be found on the KTM website.


International KTM Website: <http://www.ktm.com>

3.4 Figures

The figures contained in the manual may depict special equipment.


In the interest of clarity, some components may be shown disassembled or may not be shown at all. It is not always necessary to disassemble the component to perform the activity in question. Please follow the instructions in the text.

4.1 Chassis number

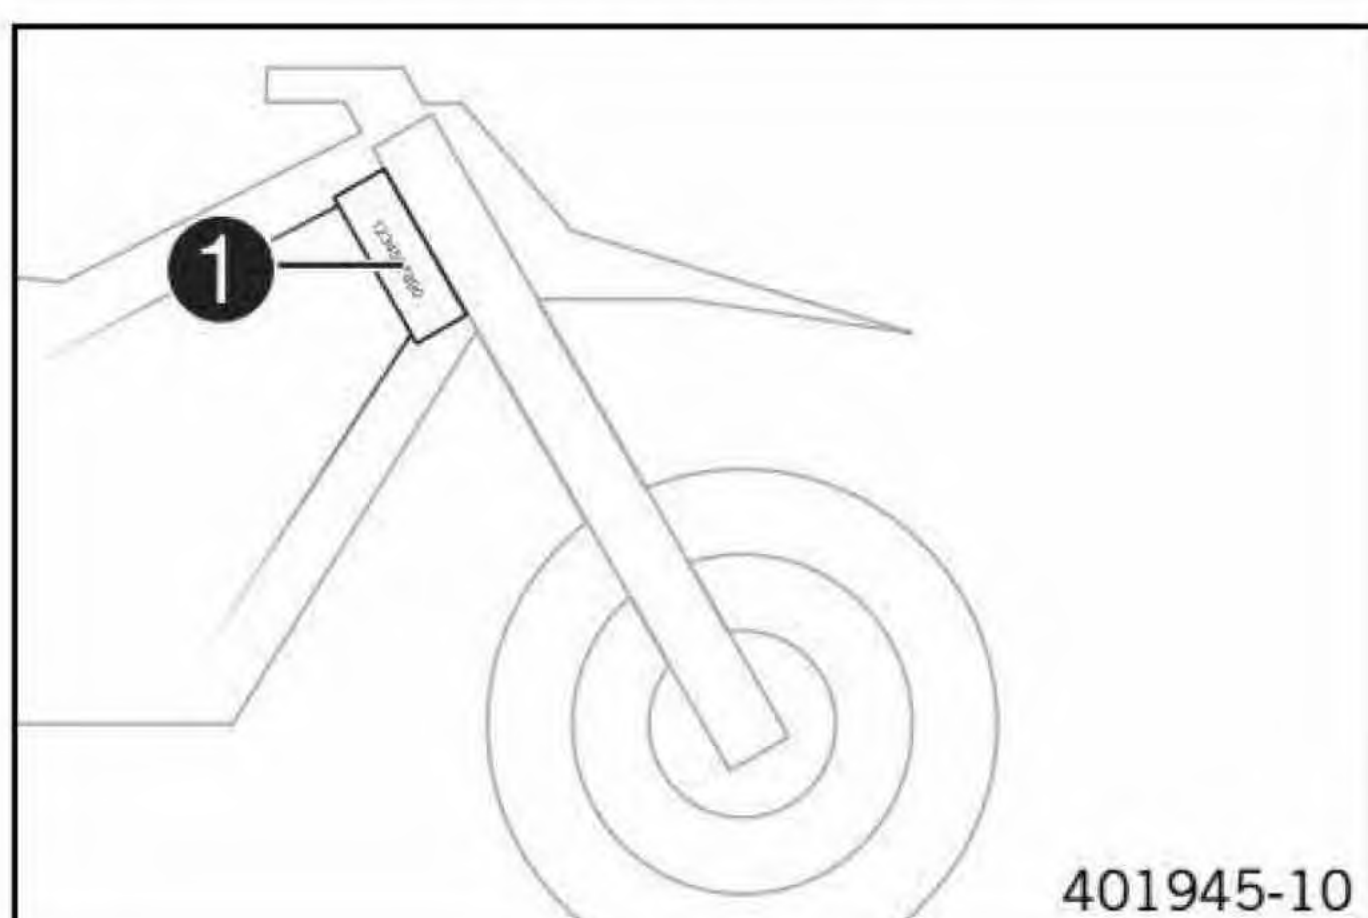


The chassis number ① is stamped on the steering head on the right.

4.2 Type label

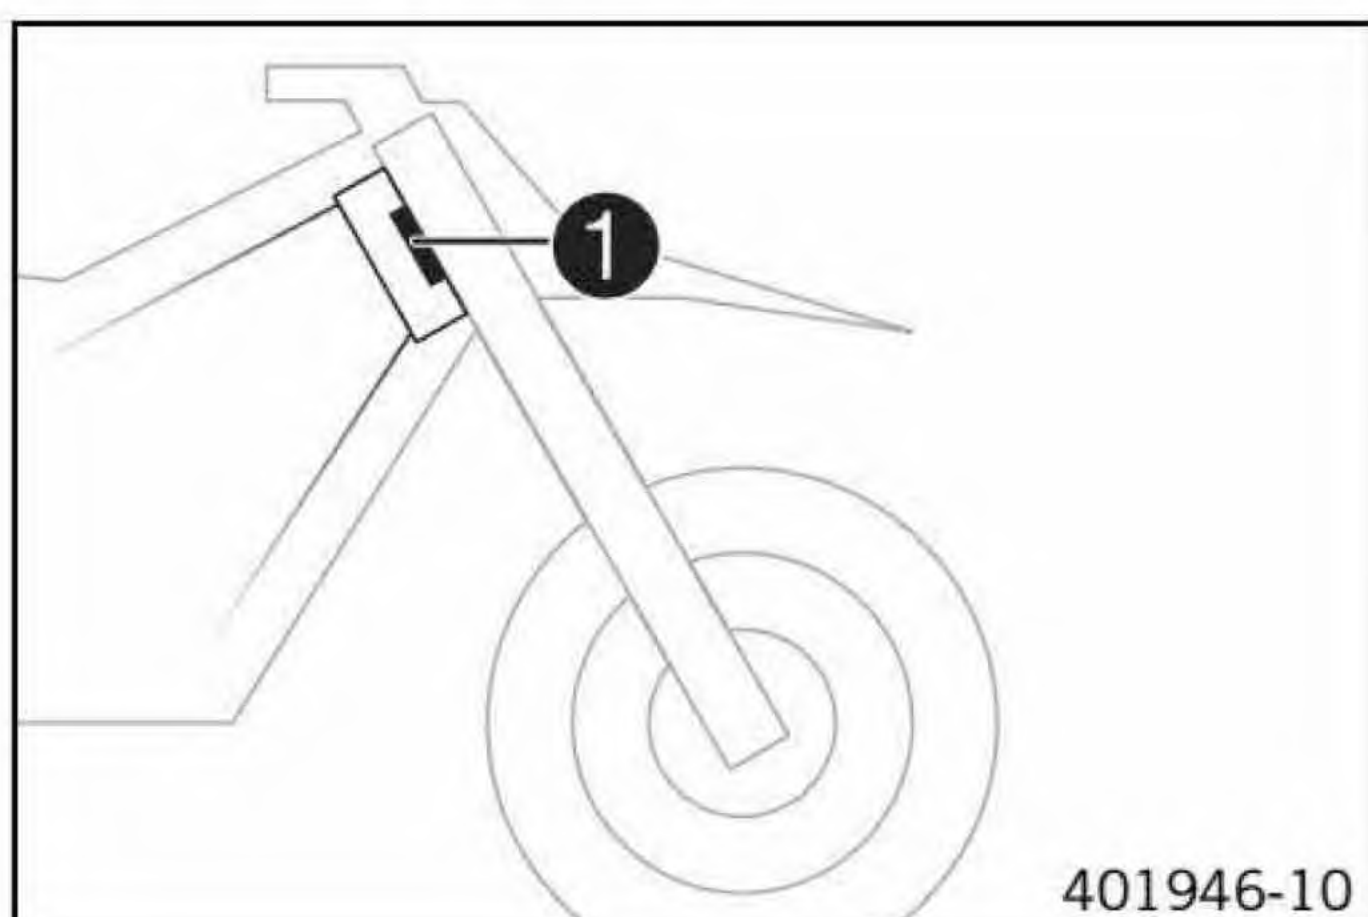

(EXC EU/AUS, EXC SIX DAYS, XC-W)


The type label ① is fixed to the front of the steering head.

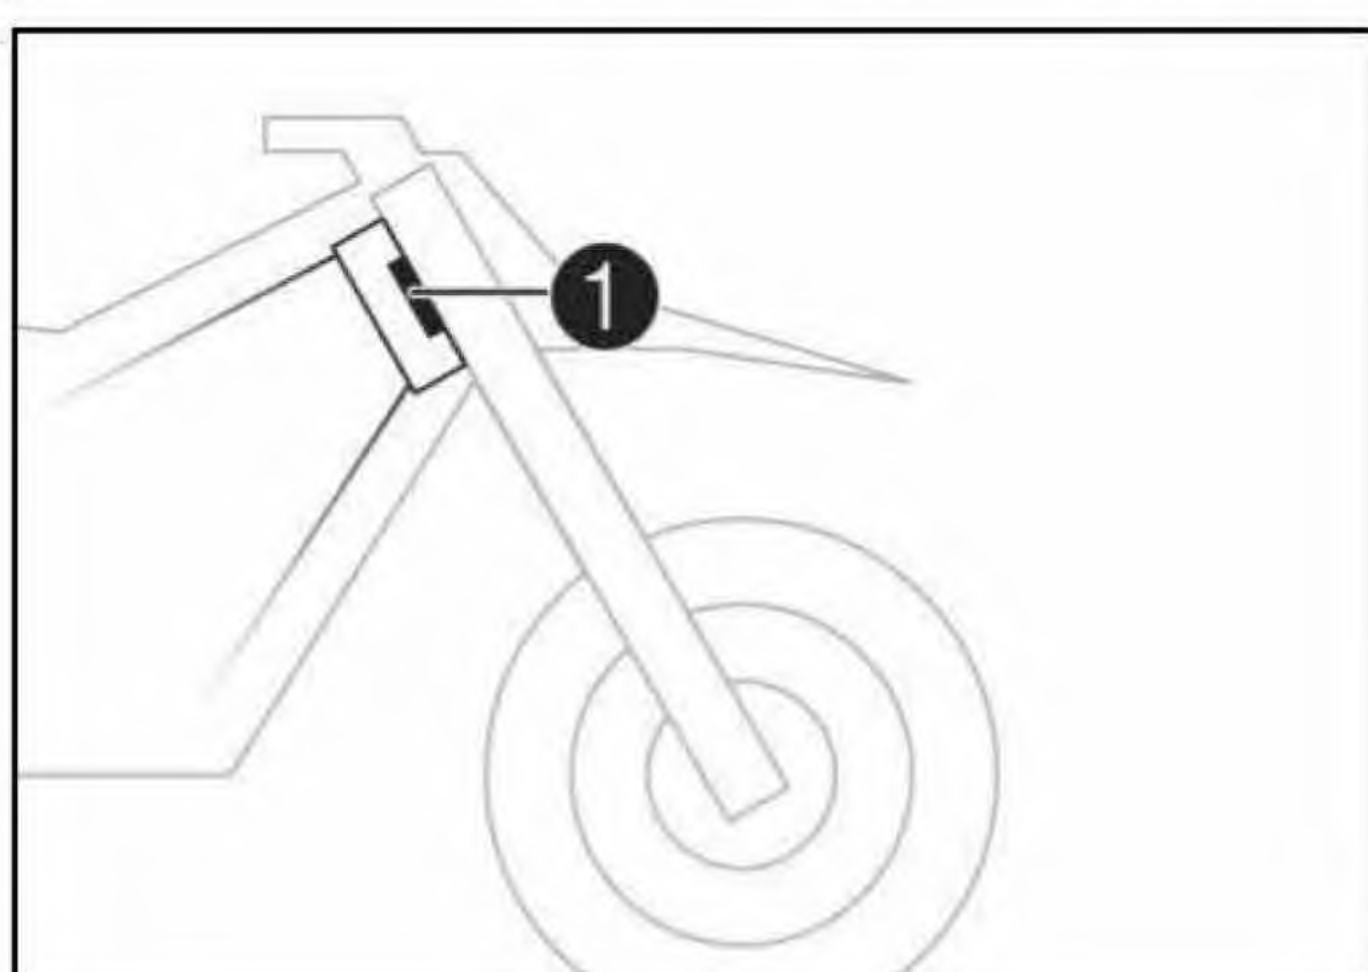


(EXC USA)

The type label ① is fixed to the front of the steering head.

The additional type label for Canada ② is fixed to the front of the front pipe.

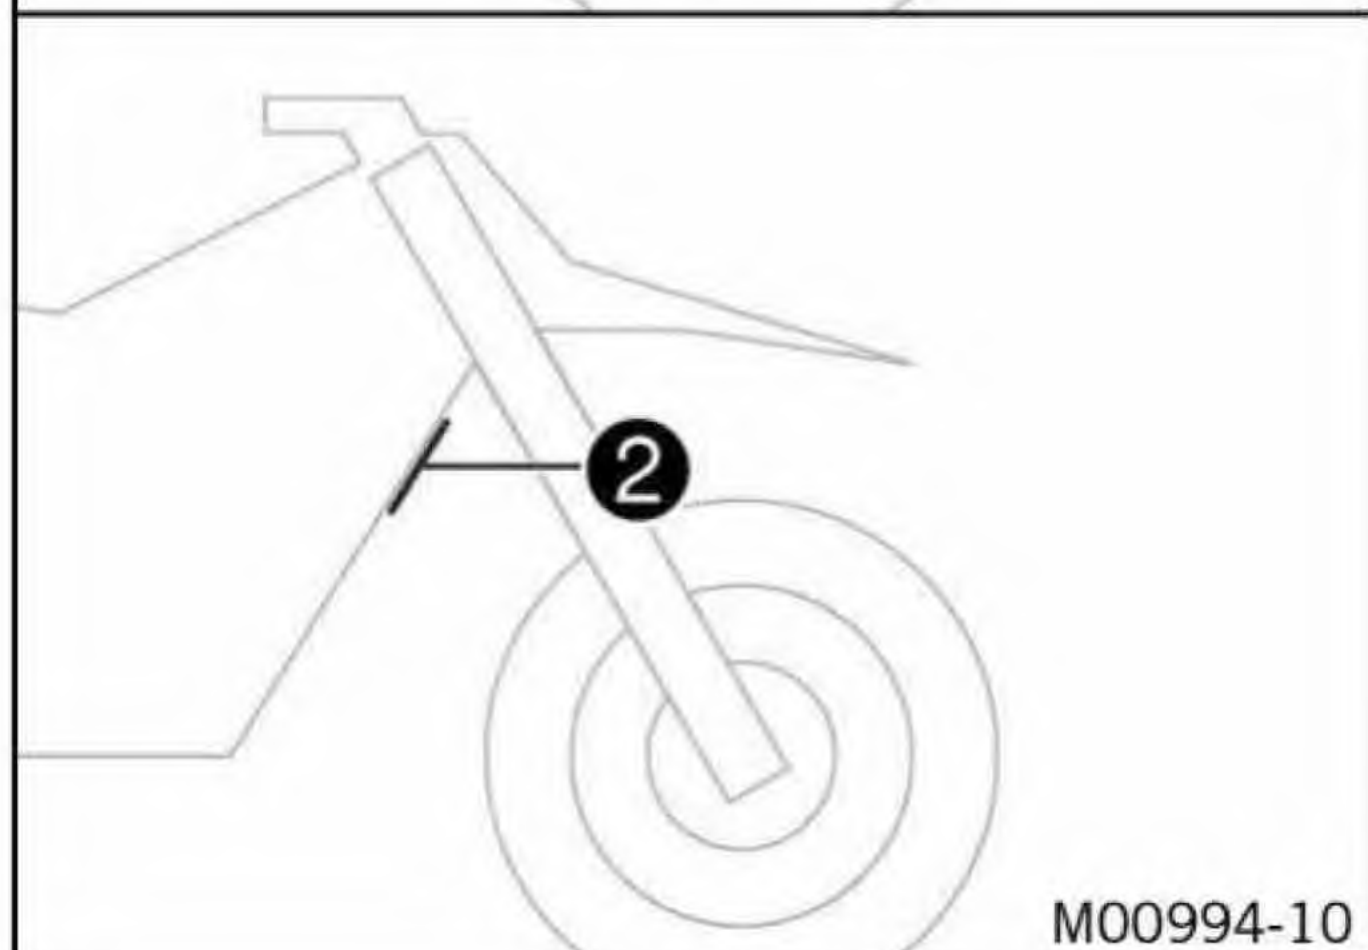

4.3 Key number (all EXC models)

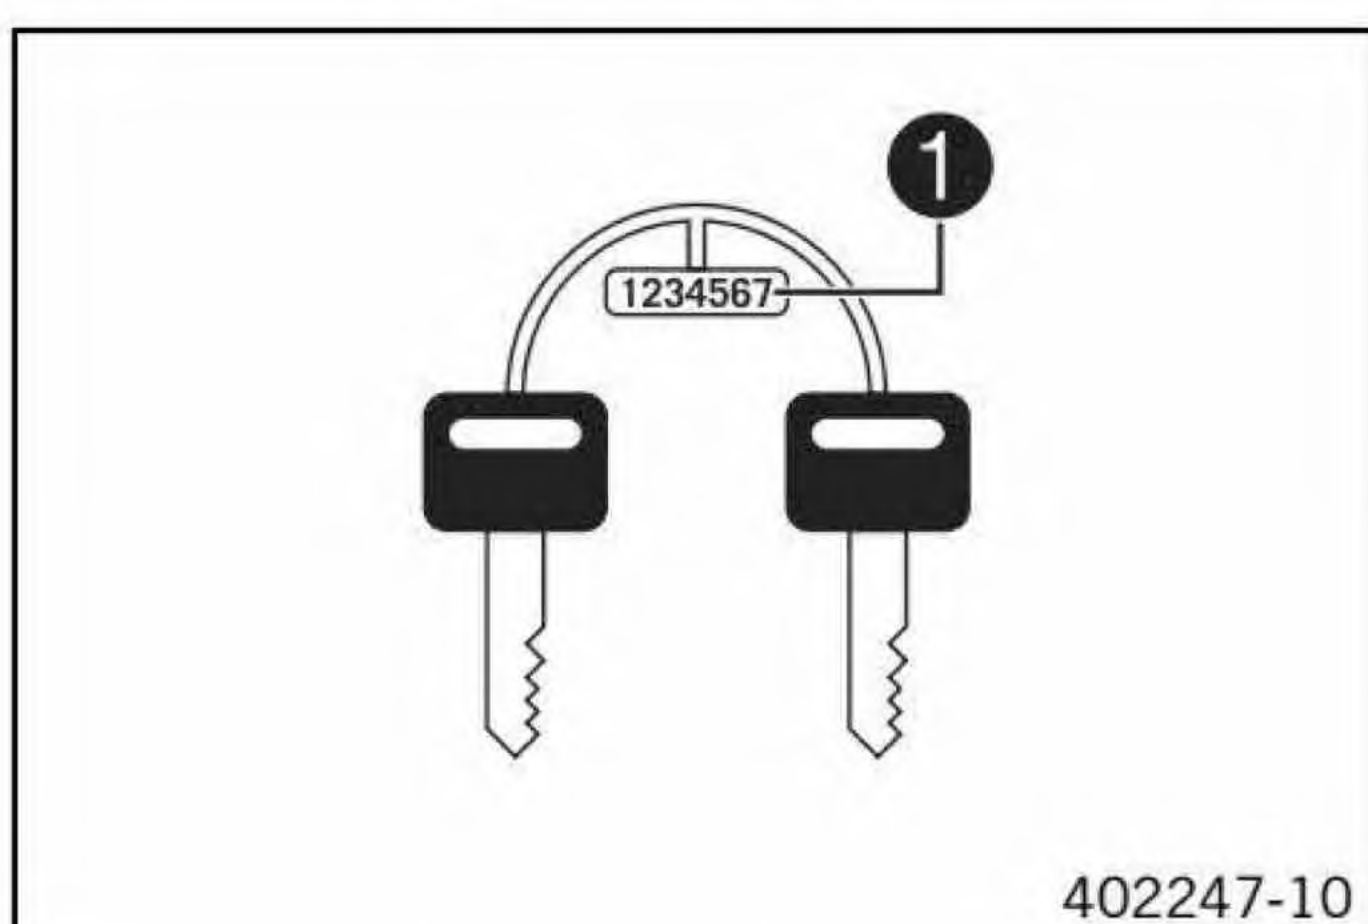

(EXC EU/AUS, EXC SIX DAYS)

The key number ① for the steering lock is stamped onto the key connector.