



YAMAHA

2007

FZ6-N/S
FZ6-NA/SA
FZ6-NHG(W)
FZ6-SHG(W)
FZ6-NAHG/SAHG
SERVICE MANUAL

4S8-28197-E0

EAS20040

**FZ6-N/S
FZ6-NA/SA
FZ6-NHG(W)/SHG(W)
FZ6-NAHG/SAHG
SERVICE MANUAL**
©2006 by Yamaha Motor Co., Ltd.
First edition, August 2006
All rights reserved.
Any reproduction or unauthorized use
without the written permission of
Yamaha Motor Co., Ltd.
is expressly prohibited.

NOTICE

This manual was produced by the Yamaha Motor Company, Ltd. primarily for use by Yamaha dealers and their qualified mechanics. It is not possible to include all the knowledge of a mechanic in one manual. Therefore, anyone who uses this book to perform maintenance and repairs on Yamaha vehicles should have a basic understanding of mechanics and the techniques to repair these types of vehicles. Repair and maintenance work attempted by anyone without this knowledge is likely to render the vehicle unsafe and unfit for use.

This model has been designed and manufactured to perform within certain specifications in regard to performance and emissions. Proper service with the correct tools is necessary to ensure that the vehicle will operate as designed. If there is any question about a service procedure, it is imperative that you contact a Yamaha dealer for any service information changes that apply to this model. This policy is intended to provide the customer with the most satisfaction from his vehicle and to conform to federal environmental quality objectives.

Yamaha Motor Company, Ltd. is continually striving to improve all of its models. Modifications and significant changes in specifications or procedures will be forwarded to all authorized Yamaha dealers and will appear in future editions of this manual where applicable.

NOTE:

- This Service Manual contains information regarding periodic maintenance to the emission control system. Please read this material carefully.
- Designs and specifications are subject to change without notice.

IMPORTANT MANUAL INFORMATION

Particularly important information is distinguished in this manual by the following.



The Safety Alert Symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!



WARNING

Failure to follow WARNING instructions could result in severe injury or death to the vehicle operator, a bystander or a person checking or repairing the vehicle.

CAUTION:

A CAUTION indicates special precautions that must be taken to avoid damage to the vehicle.

NOTE:

A NOTE provides key information to make procedures easier or clearer.

HOW TO USE THIS MANUAL

This manual is intended as a handy, easy-to-read reference book for the mechanic. Comprehensive explanations of all installation, removal, disassembly, assembly, repair and check procedures are laid out with the individual steps in sequential order.

- The manual is divided into chapters and each chapter is divided into sections. The current section title is shown at the top of each page “1”.
- Sub-section titles appear in smaller print than the section title “2”.
- To help identify parts and clarify procedure steps, there are exploded diagrams at the start of each removal and disassembly section “3”.
- Numbers are given in the order of the jobs in the exploded diagram. A number indicates a disassembly step “4”.
- Symbols indicate parts to be lubricated or replaced “5”.
- Refer to “SYMBOLS”.
- A job instruction chart accompanies the exploded diagram, providing the order of jobs, names of parts, notes in jobs, etc “6”.
- Jobs requiring more information (such as special tools and technical data) are described sequentially “7”.

CLUTCH

5-46

CLUTCH

Removing the clutch cover

Order	Job/Parts to remove	Qty	Remarks
	Engine oil		Drain Rule is "CHANGING THE ENGINE OIL" on page 3-14.
	Coolant		Drain Rule is "CHANGING THE COOLANT" on page 3-20.
1	Coolant hose	1	
2	Clutch cable	1	
3	Clutch cable holder	1	
4	Clutch cover	1	
5	Clutch cover gasket	1	
6	Dowel pin	2	

* Yamaha bond No.1215 (Three Bond No.1215B)

5-46

CLUTCH

5-50

CLUTCH

Checking the clutch plates

The following procedure applies to all of the clutch plates.

- Check:
 - Clutch plate
- Measure:
 - Clutch plate warpage (with a surface plate and thickness gauge "1")

Out of specification → Replace the clutch plates as a set.

Warpage limit
0.10 mm (0.0039 in)

Checking the clutch housing

- Check:
 - Clutch housing dogs "1"

Damage/pitting/wear → Deburr the clutch housing dogs or replace the clutch housing

NOTE:
Pitting on the clutch housing dogs will cause erratic clutch operation.

Checking the clutch springs

The following procedure applies to all of the clutch springs.

- Check:
 - Clutch spring
- Measure:
 - Clutch spring free length "a"

Out of specification → Replace the clutch springs as a set.

Clutch spring free length
55.00 mm (2.17 in)
Minimum length
54.00 mm (2.13 in)
Limit
52.3 mm (2.06 in)

Checking the clutch boss

- Check:
 - Clutch boss splines

Damage/pitting/wear → Replace the clutch boss.


5-50

SYMBOLS

The following symbols are used in this manual for easier understanding.

NOTE:

The following symbols are not relevant to every vehicle.

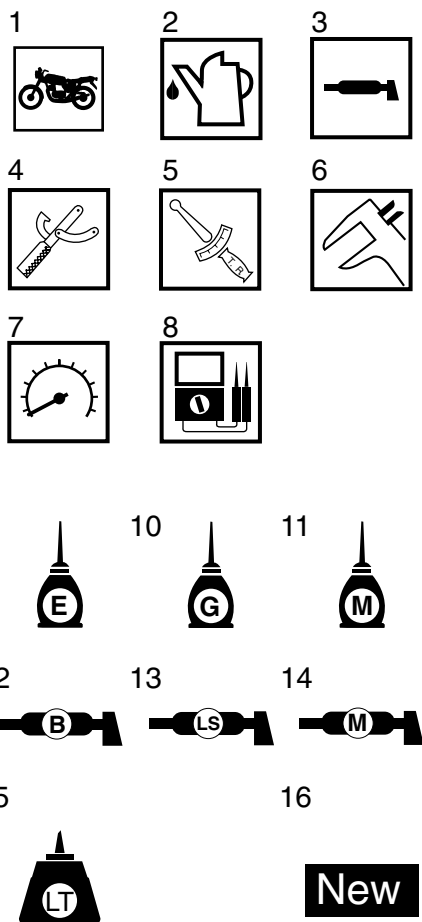

16. Replace the part

1. Serviceable with engine mounted
2. Filling fluid
3. Lubricant
4. Special tool
5. Tightening torque
6. Wear limit, clearance
7. Engine speed
8. Electrical data
9. Engine oil
10. Gear oil
11. Molybdenum-disulfide oil
12. Wheel-bearing grease
13. Lithium-soap-based grease
14. Molybdenum-disulfide grease
15. Apply locking agent (LOCTITE®)

TABLE OF CONTENTS

GENERAL INFORMATION	1
SPECIFICATIONS	2
PERIODIC CHECKS AND ADJUSTMENTS	3
CHASSIS	4
ENGINE	5
COOLING SYSTEM	6
FUEL SYSTEM	7
ELECTRICAL SYSTEM	8
TROUBLESHOOTING	9

GENERAL INFORMATION

IDENTIFICATION	1-1
VEHICLE IDENTIFICATION NUMBER	1-1
MODEL LABEL	1-1
 FEATURES	1-2
OUTLINE OF FI SYSTEM	1-2
FI SYSTEM	1-3
INSTRUMENT FUNCTIONS	1-4
OUTLINE OF THE ABS	1-9
ABS COMPONENT FUNCTIONS	1-13
ABS OPERATION	1-19
ABS SELF-DIAGNOSIS FUNCTION	1-23
ABS WARNING LIGHT AND OPERATION	1-26
 IMPORTANT INFORMATION	1-28
PREPARATION FOR REMOVAL AND DISASSEMBLY	1-28
REPLACEMENT PARTS	1-28
GASKETS, OIL SEALS AND O-RINGS	1-28
LOCK WASHERS/PLATES AND COTTER PINS	1-28
BEARINGS AND OIL SEALS	1-29
CIRCLIPS	1-29
 CHECKING THE CONNECTIONS	1-30
 SPECIAL TOOLS	1-31